




## Linkable - IP44 10 Light LED Outdoor String

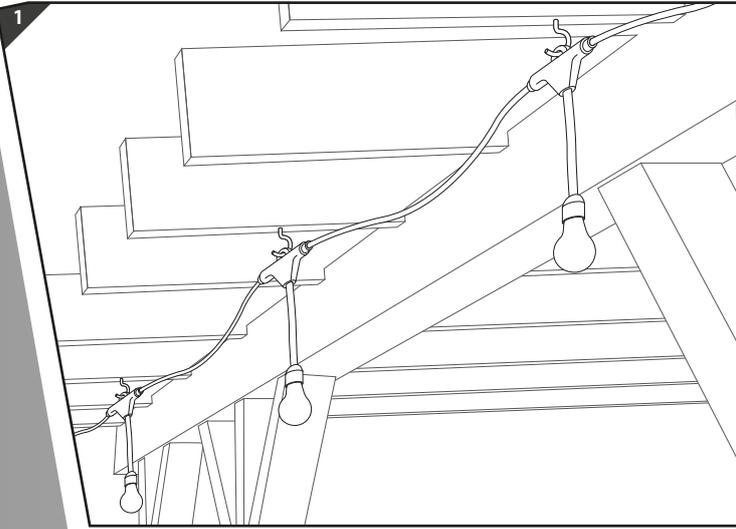


1 Select suitable location and arrange the string light. Ensure the lead cable/plug can reach the plug socket.

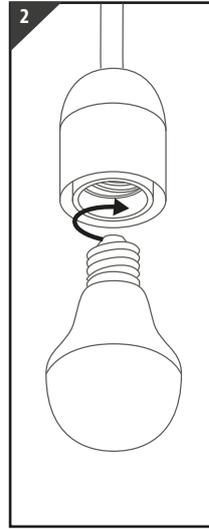


2 Screw in the E27/ES lamps into the screw in lampholders

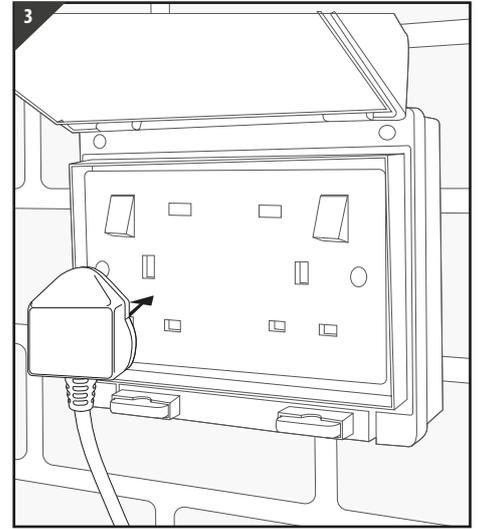


3 Ensure power source is dry (outdoor rated socket, IP rated box or indoor location)

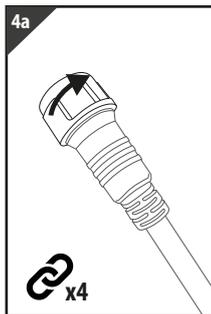


4a To link another set of string lights. On the first string remove the waterproof cover at the end of the cable

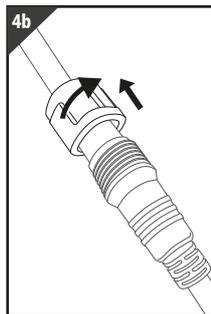


4b On the second string loosen the connecting cap in-between the plug and first light and separate

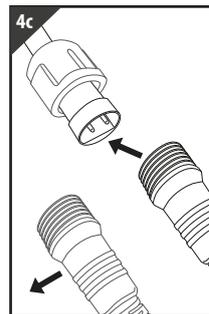


4c Attach the exposed male and female sockets to connect the 2 strings

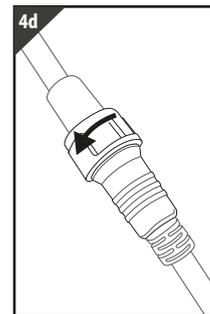


4d Secure the connecting cap over the linked strings. You can link 4 sets of lights together

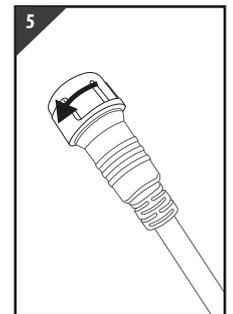


5 Warning. End connector must be always covered to avoid potential risks. Periodically check and tighten if needed

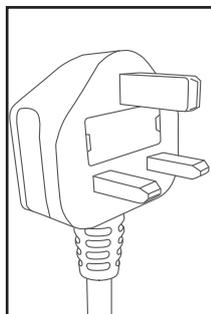


Should you need change the fuse (plus is non-rewireable), follow these steps

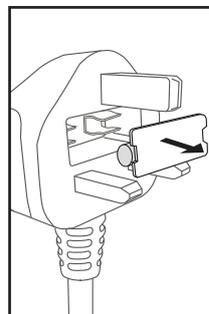

Ensure plug has cooled. Remove fuse casing from the plug

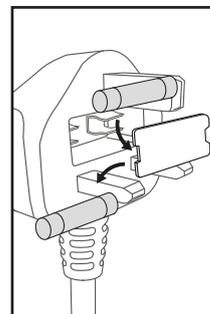

Remove 3-amp fuse and replace with an operational 3-amp fuse

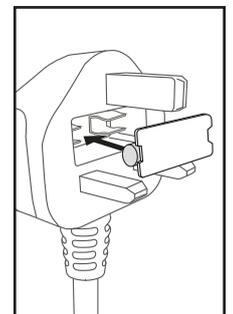

Return fuse casing into the plug



**DO NOT MODIFY** – this will invalidate the warranty and could be dangerous.  
Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist.  
Check with your Local Authority or retailer for recycling advice.