




Position Floodlight bracket over Base bracket

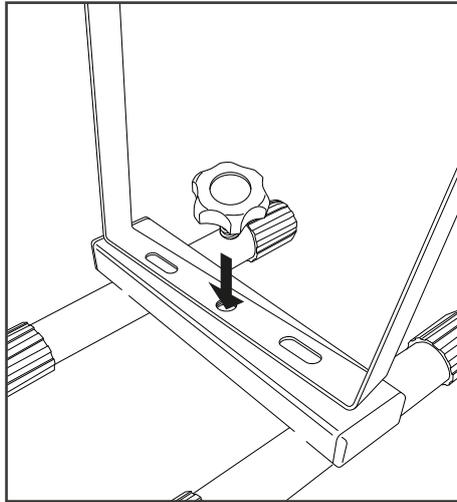


Insert securing screw.
Rotate floodlight to gain better access.

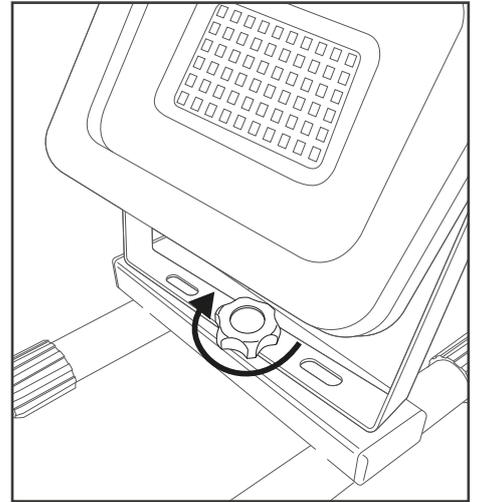


Tighten screw to lock into desired position

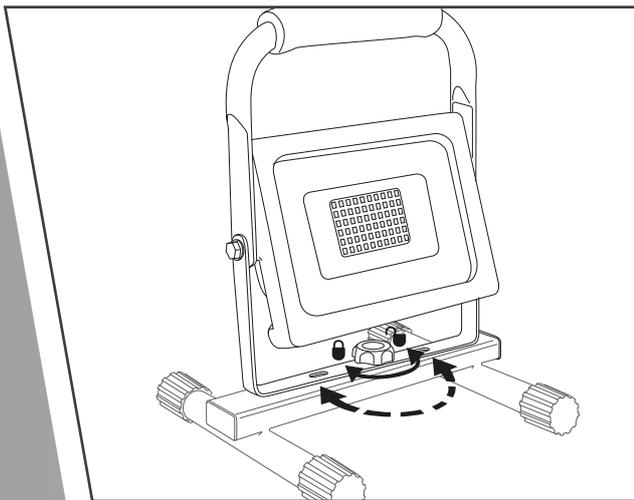


Turn knob anti-clockwise to unlock. Flood bracket has a horizontal rotation of 360°, ensure cable does not tangle with the stand. Turn knob clockwise to lock in the desired location.

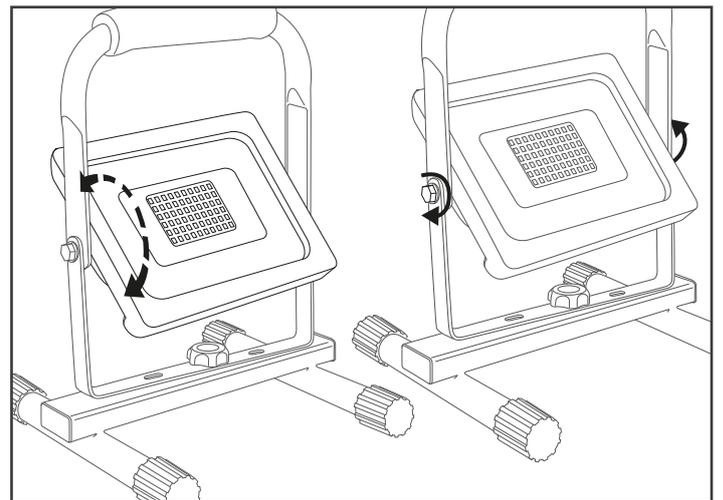


Floodlight has a vertical rotation of 270°, ensure cable does not tangle with the bracket. Periodically check the bolt and tighten if needed as this will become loose over time.

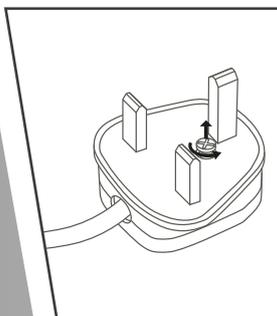


Although NOT recommended - should you need change the fuse or re-wire, follow these steps.

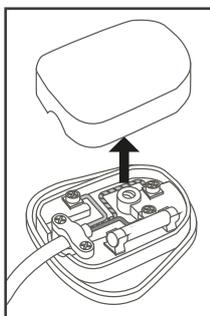


Ensure plug has cooled. Loosen screw and remove plug cover.

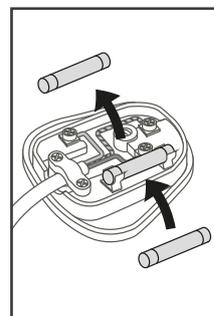

Remove 13-amp fuse and replace with an operational 13-amp fuse

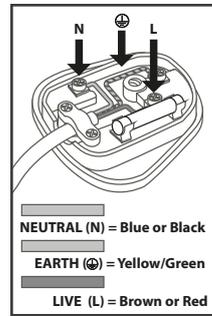

Ensure wires are securely attached with no loose bare wires. Product requires Earthing.

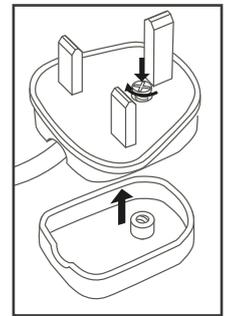

Replace cover and tighten screw to secure. Plug IP20 and should be used in dry locations.



DO NOT MODIFY – this will invalidate the warranty and could be dangerous.

Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.